# WORLD-BEAM® QS18 Series Sensor



## Quick Start Guide

Miniature Self-Contained Photoelectric Sensors In Universal-Mount Housing

This guide is designed to help you set up and install the WORLD-BEAM® QS18. For complete information on programming, performance, troubleshooting, dimensions, and accessories, please refer to the Instruction Manual at *www.bannerengineering.com.* Search for p/n 197052 to view the Instruction Manual. Use of this document assumes familiarity with pertinent industry standards and practices.



## WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel protection. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

## Models

Model <sup>1</sup>	Sensing Mode		Output Type	Model <sup>1</sup>	Sensing Mode		Output Type
QS186E	20 m (66 ft) Opposed	OPPOSED	Emitter	QS18VN6DB	450 mm (18 in) Diffuse		NPN
QS186EV				QS18VP6DB			PNP
QS18VN6R			NPN	QS18VN6DL	600 mm (24 in) Diffuse	Diffuse	NPN
QS18VP6R		OPPOSED	PNP	QS18VP6DL	600 mm (24 m) Diruse		PNP
				QS18VN6W		DIVERGENT	NPN
QS186EB	3 m (10 ft) Opposed	OPPOSED	Emitter	QS18VP6W	100 mm (4 in) Divergent Diffuse		PNP
QS18VN6RB			NPN				
QS18VP6RB			PNP	QS18VN6FF50	50 mm (2 in)	NPN	
QS18VN6LP	3.5 m (12 ft) Polarized Retro	P P P P P P P P P P P P P P P P P P P	NPN	QS18VP6FF50	Fixed-Field	Fixed-Field	PNP
QS18VP6LP			PNP	QS18VN6FF100	100 mm (4 in) Fixed-Field		NPN
				QS18VP6FF100			PNP
QS18VN6LV	6.5 m (21 ft) Non-Polarized Retro		NPN	QS18VN6FF150	150 mm (6 in) Fixed-Field		NPN
QS18VP6LV			PNP	QS18VP6FF150			PNP
				QS18VN6FP	220 mm (8.7 in) Individual (Opposed)	PLASTIC FIBER	NPN
QS18VN6CV15	16 mm (0.63 in) Convergent		NPN		60 mm (2.4 in) Bifurcated (Diffuse)		PNP
QS18VP6CV15			PNP	QS18VP6FP	Range specified using 1.5 mm plastic fiber optics		
QS18VN6CV45	43 mm (1.7 in) Convergent	CONVERGENT VISIBLE RED	NPN	QS18VN6F	500 mm (20 in) Individual (Opposed) 38 mm (1.5 in) Bifurcated ( Diffuse) Range specified using 3.2 mm plastic fiber optics	GLASS FIBER	NPN
QS18VP6CV45			PNP	QS18VP6F			PNP
QS18VN6D	450 mm (18 in) Diffuse	DIFFUSE	NPN				
QS18VP6D			PNP				


1 Integral 2 m (6.5 ft) unterminated cable models are listed.

• To order the 9 m (30 ft) PVC cable model, add the suffix "W/30" to the cabled model number. For example, OS186E W/30.

- To order the 4-pin M12/Euro-style integral quick disconnect model, add the suffix "Q8" to the model number. For example, QS186EQ8. To order the 150 mm (6 in) PVC cable model with a 4-pin M12/Euro-style quick disconnect, add the suffix "Q5" to the model number. For example, QS186EQ5.
  - To order the 4-pin M8/Pico-style integral quick disconnect model, add the suffix "Q7" to the model number. For example, QS186EQ7.
- To order the 150 mm (6 in) PVC cable model with a 4-pin M8/Pico-style quick disconnect, add the suffix "Q" to the model number. For example, QS186EQ.



## Wiring Diagrams

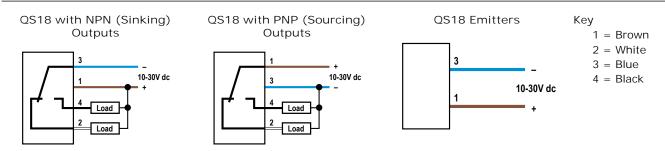

Quick disconnect (QD) wiring diagrams are functionally identical.

## Specifications

Supply Voltage

10 V to 30 V dc (10% maximum ripple) at less than 25 mA, exclusive of load

Protected against reverse polarity and transient voltages

Light Source

Glass Fiber Optic, Opposed and Diffuse mode models: Infrared, 940 nm Plastic Fiber Optic, Retroreflective, Convergent models: Visible red, 660 nm

Fixed-Field models: Visible red, 630 nm

Adjustments

Glass Fiber Optic, Plastic Fiber Optic, Convergent, Diffuse, and Retroreflective mode models (only): Single-turn sensitivity (Gain) adjustment potentiometer

#### Indicators

2 LED indicators on sensor top:

Green solid: Power on

Amber solid: Light sensed

Amber flashing: Marginal excess gain (1 to 1.5 times excess gain)

**Required Overcurrent Protection** 



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)		
20	5.0		
22	3.0		
24	2.0		
26	1.0		
28	0.8		
30	0.5		

#### Repeatability Opposed Mode: 100 microseconds

DL and FF Modes: 90 microseconds All Other Modes: 150 microseconds

Output Configuration

Solid-state complementary (SPDT): NPN or PNP (current sinking or sourcing), depending on model; Rating: 100 mA maximum each output at 25 °C

DL and FF Modes ON-state Saturation Voltage: less than 1.5 V at 10 mA; less than 3 V at 100 mA

All Other Modes: ON-state Saturation Voltage: less than 1 V at 10 mA; less than 1.5 V at 100 mA

Protected against false pulse on power-up and continuous overload or short circuit of outputs

#### Output Response

Opposed Mode: 750 microseconds ON; 375 microseconds OFF

FF and DL Modes: 850 microseconds ON/OFF All Other Modes: 600 microseconds ON/OFF

Note: 100 millisecond delay on power-up; outputs do not conduct

during this time

#### Construction ABS housing

3 mm mounting hardware included

Connections

2 m (6.5 ft) 4-wire PVC cable, 9 m (30 ft) 4-wire PVC cable, 4-pin Picostyle or Euro-style QD, 4-pin Pico-style or Euro-style 150 mm (6 in) QD, depending on model

Environmental

IEC IP67; NEMA 6

**Operating Conditions** 

Temperature: -20 °C to +70 °C (-4 °F to +158 °F) 95% at +50 °C maximum relative humidity (non-condensing)


Certifications



Note: For performance specifications of the FF50 and FF100 models built prior to date code 17090, refer to document p/n 63908.

### Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise.

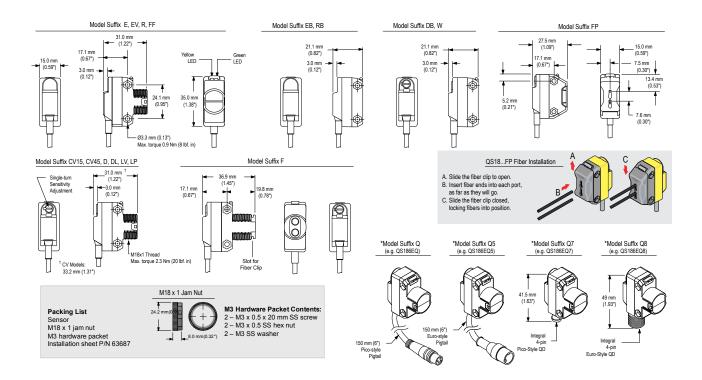

## Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product modifications to this product without prior experiments. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation, refer to: www.bannerengineering.com.

