




Transferring WindSRV (KEPServerEX5) Software License





Step 1: Transferring current license of old PC


1. Click *Start* → *All Programs* → *Keeware* → *KEPServerEX5* → *License* → *License Utility*

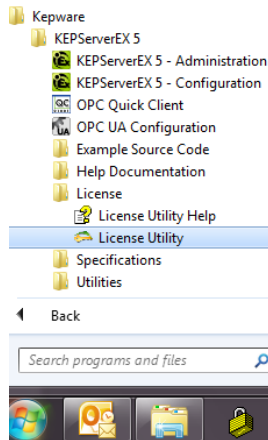

2. Keeware License Utility – Welcome dialog box appears, select *Manage Software Licenses*. Click *Next*.




3. Select *Transfer a product activation*. Click *Next*.

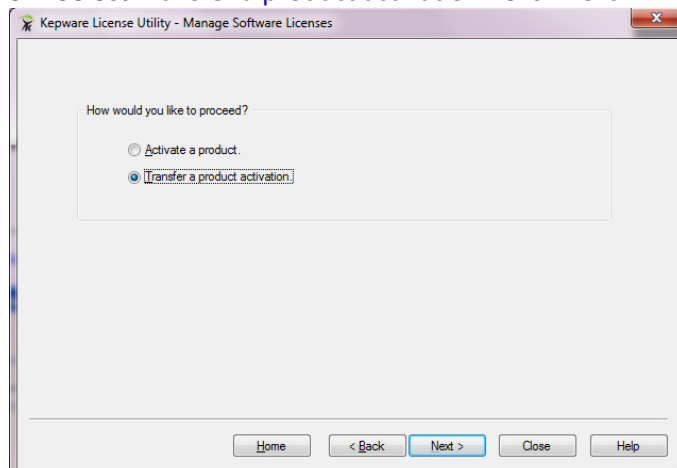




4. Click *Save to File*.

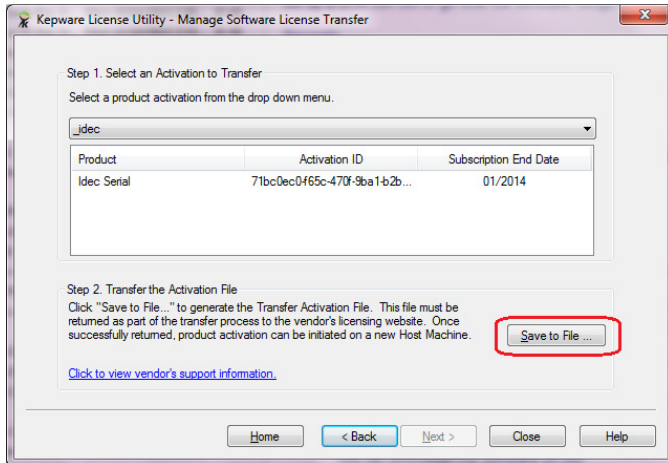


5. Warning dialog boxes appear, click *OK, OK* to continue.

6. Note the location where the **"transfer_request"** file is saved, preferably in a USB memory stick so you can transfer it to the new PC. Click *Save*.

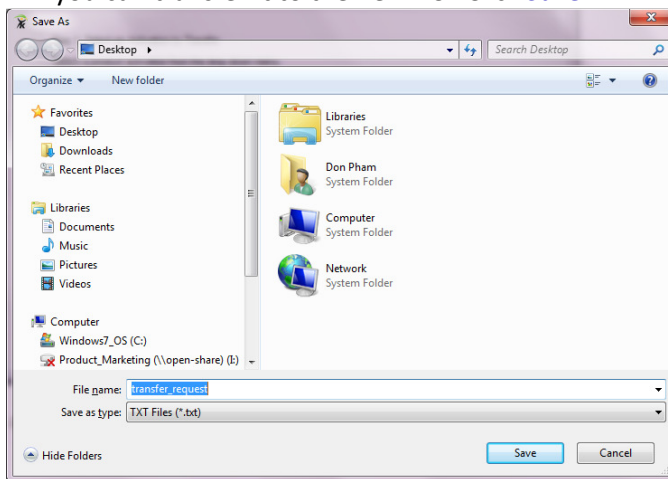


7. Click *Close*.

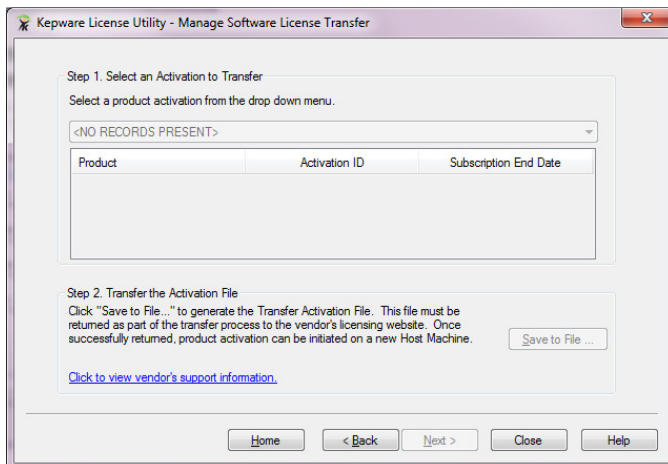




Step 2: Transfer Request File using IDEC portal


- Open your web browser and visit the IDEC portal site:
https://licensing.kepware.com/licensing_portal/customer-center.aspx?id=Idec&page=return
- Click *Choose File*.

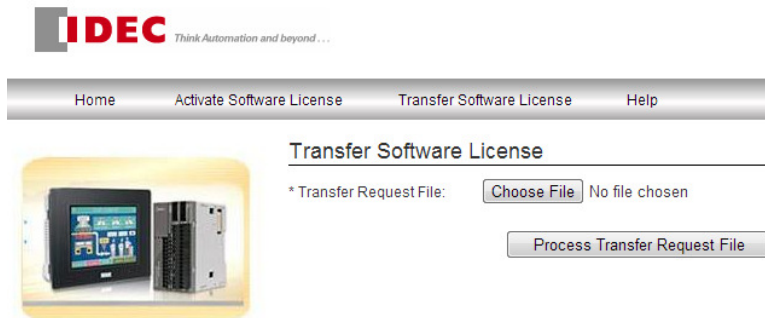

- Locate the “**transfer_request**” file noted in step 6, click *Open*.

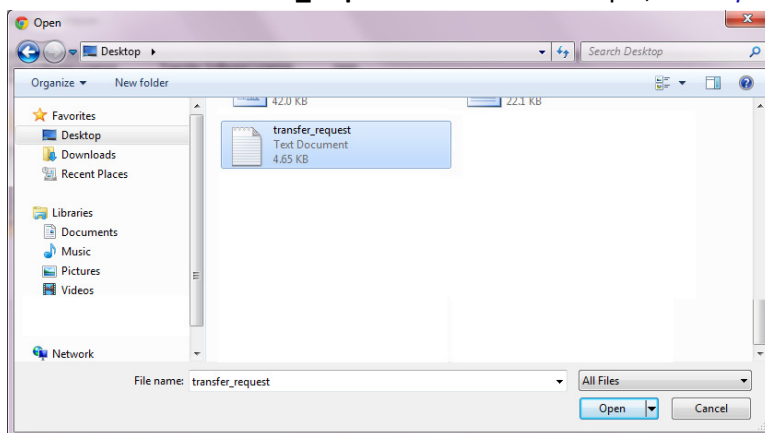


- Click *Process Transfer Request File*.

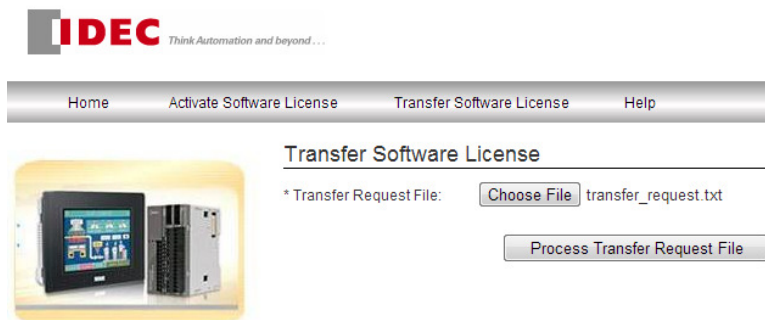




18. Highlight and Copy the values underneath EntitlementId.

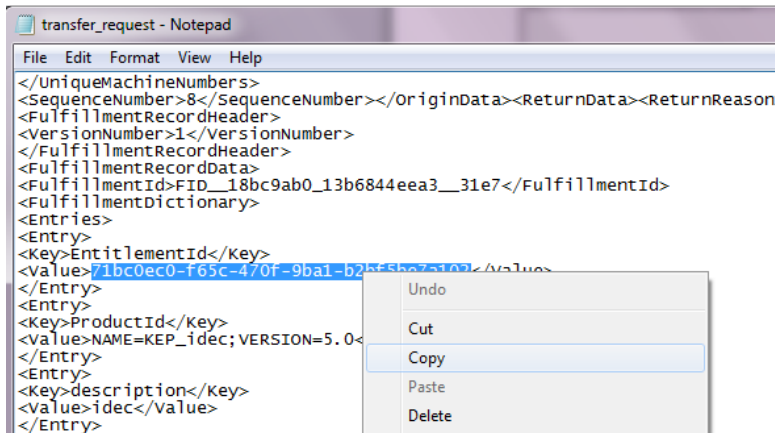

19. Go back to License Utility, and *Paste* these values onto the Activation ID field.

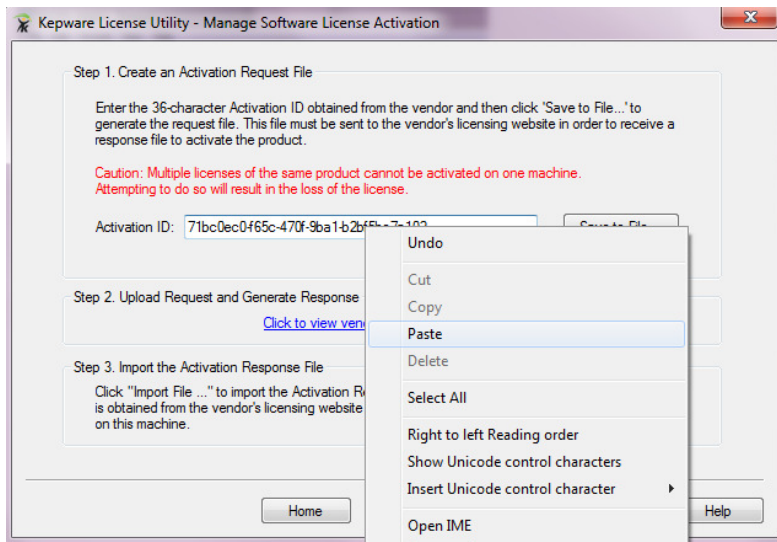


20. Click *Save to File*. Note the Location where the "activation_request" file is saved.


21. Open your web browser and visit the IDEC portal site:

https://licensing.keypare.com/licensing_portal/customer-center.aspx?id=idec&page=activate

22. Click *Choose File*. Locate the "activation_request" file and click *Open*.

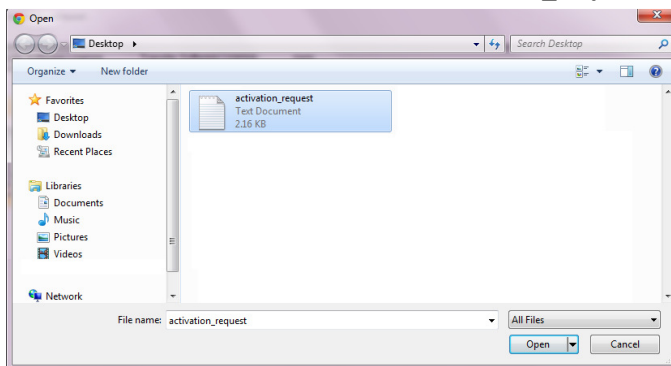


23. Click *Generate Activation Response File*.

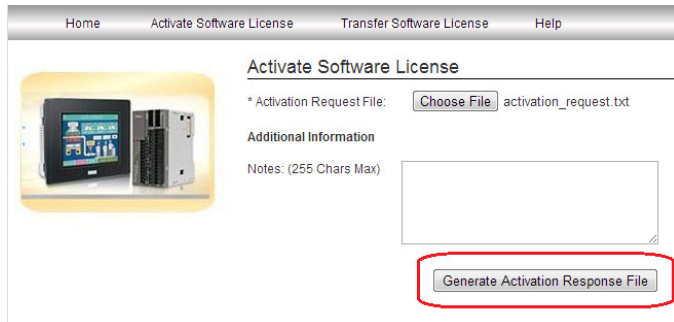

24. Saved and note the location of the “**response**” file.


25. Go back to License Utility.

26. Click *Import File*.

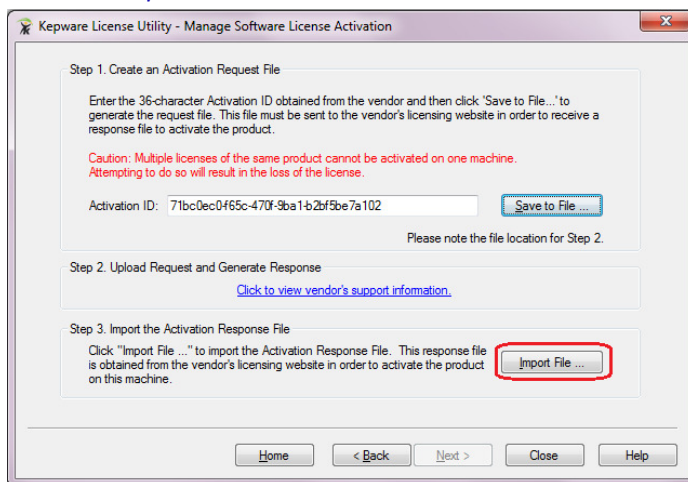

27. Locate “**response**” file in step 24, and click *Open*.

28. WindSRV software license is now transferred to your new PC. Click *Close*.

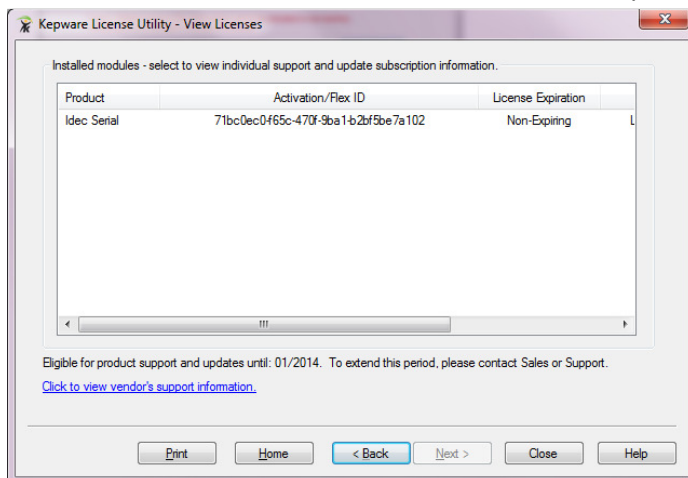

END