AXL F DO32/1 1F

Axioline F, digital output module, digital outputs: 32, 24 V DC, 500 mA, connection method: 1-wire

Data sheet 8124_en_02

© PHOENIX CONTACT 2018-10-12



1 Description

The module is designed for use within an Axioline F station. It is used to output digital signals. The outputs are protected against short circuit and overload.

Features

- 32 digital outputs
- 24 V DC, 500 mA
- Connection of actuators in single-wire technology
- Minimum update time of < 100 μs
- Device rating plate stored

Valid for hardware Version 05, firmware Version 1.00 or later.



The deviating behavior of the modules with an earlier hardware revision is documented in the corresponding points.



This data sheet is only valid in association with the UM EN AXL F SYS INST user manual.



Make sure you always use the latest documentation.

It can be downloaded at: phoenixcontact.net/product/2688051



Table of contents Internal circuit diagram8 Parameter, diagnostics and information (PDI)11 12.2 12.3

3 Ordering data

Description	Туре	Order No.	Pcs./Pkt.
Axioline F, Digital output module, digital outputs: 32, 24 V DC, 500 mA, connection method: 1-wire, transmission speed in the local bus: 100 Mbps, degree of protection: IP20, including bus base module and Axioline F connectors	AXL F DO32/1 1F	2688051	1
Accessories	Туре	Order No.	Pcs./Pkt.
Axioline F bus base module for housing type F (Replacement item)	AXL F BS F	2688129	5
Zack marker strip for Axioline F (device labeling), in 2 x 20.3 mm pitch, unprinted, 25-section, for individual labeling with B-STIFT 0.8, X-PEN, or CMS-P1-PLOTTER (Marking)	ZB 20,3 AXL UNPRINTED	0829579	25
Zack marker strip, flat, in 10 mm pitch, unprinted, 10- section, for individual labeling with M-PEN 0,8, X-PEN, or CMS-P1-PLOTTER (Marking)	ZBF 10/5,8 AXL UNPRINTED	0829580	50
Insert label, for the Axioline F series from Phoenix Contact, Roll, white, unlabeled, can be labeled with: THERMOMARK ROLL 2.0, THERMOMARK ROLL, THERMOMARK ROLL X1, THERMOMARK ROLLMASTER 300/600, THERMOMARK X1.2, mounting type: snapped into marker carrier, lettering field size: 35 x 46 mm (Marking)	EMT (35X46)R	0801604	1
V8 adapter for 8 x PLC-INTERFACE (6.2 mm); Controller: PLC system cabling of output cards; connection 1: Plug connection (Can be snapped onto 8x PLC-INTERFACE terminals); connection 2: 1x IDC/FLK pin strip (14-position); number of channels: 8; control logic: positive switching (Connector/Adapter)	PLC-V8/FLK14/OUT	2295554	1
V8 adapter for 8 x PLC-INTERFACE (14 mm); Controller: PLC system cabling of output cards; connection 1: Plug connection (Can be snapped onto 8x PLC-INTERFACE terminals); connection 2: 1x IDC/FLK pin strip (14-position); number of channels: 8; control logic: positive switching (Connector/Adapter)	PLC-V8L/FLK14/OUT	2299660	1
VARIOFACE module, with screw connection and flat- ribbon cable connector, for mounting on NS 35 rails, with pin strip and short and long locking latches for socket strips, 20-pos.	VIP-2/SC/FLK20	2315049	1
VARIOFACE module, with screw connection and flat- ribbon cable connector, for mounting on NS 35 rails, with pin strip and short and long locking latches for socket strips, 20-pos., with LED	VIP-2/SC/FLK20/LED	2322074	1


PHOENIX CONTACT 3 / 17 8124_en_02

Accessories	Туре	Order No.	Pcs./Pkt.
VARIOFACE module, with push-in connections and flat- ribbon cable connector, for mounting on NS 35 rails, with pin strip and short and long locking latches for socket strips, 20-pos.	VIP-2/PT/FLK20	2903790	1
VARIOFACE module, with push-in connection and flat- ribbon cable connector, for mounting on NS 35 rails, with pin strip and short and long locking latches for socket strips, 20-pos., with LED	VIP-2/PT/FLK20/LED	2904251	1
VARIOFACE SLIM LINE, with screw connection and flat- ribbon cable connector, for assembly at a right angle on NS 35/7.5, 20 positions	UM 25-FLK20/FRONT/Q	2959515	1

Documentation	Туре	Order No.	Pcs./Pkt.
User manual, English, Axioline F: System and installation	UM EN AXL F SYS INST	-	-
User manual, English, Axioline F: Diagnostic registers, and error messages	UM EN AXL F SYS DIAG	-	-

4 Technical data

Dimensions (nominal sizes in mm)

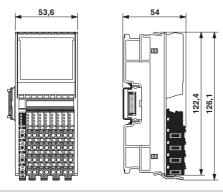

Width	53.6 mm
Height	126.1 mm
Depth	54 mm
Note on dimensions	The depth is valid when a TH 35-7,5 DIN rail is used (according to EN 60715).

8124_en_02 PHOENIX CONTACT 4 / 17

General data	
Color	traffic grey A RAL 7042
Weight	191 g (with connectors and bus base module)
Ambient temperature (operation)	-25 °C 60 °C
Ambient temperature (storage/transport)	-40 °C 85 °C
Permissible humidity (operation)	5 % 95 % (non-condensing)
Permissible humidity (storage/transport)	5 % 95 % (non-condensing)
Air pressure (operation)	70 kPa 106 kPa (up to 3000 m above sea level)
Air pressure (storage/transport)	70 kPa 106 kPa (up to 3000 m above sea level)
Degree of protection	IP20
Protection class	III, IEC 61140, EN 61140, VDE 0140-1
Mounting position	any (no temperature derating)
Connection data: Axioline F connector	
Connection method	Push-in connection
Conductor cross section solid / stranded	0.2 mm ² 1.5 mm ² / 0.2 mm ² 1.5 mm ²
Conductor cross section [AWG]	24 16
Stripping length	8 mm
Please observe the information provided on conductor cross sections in the "Axioline F: system and installation" user manual.	

Interface: Axioline F local bus	
Number	2
Connection method	Bus base module
Transmission speed	100 Mbps
Axioline F local bus supply (U _{Bus})	
Supply voltage	5 V DC (via bus base module)
Current draw	max. 120 mA (up to HW 04)

Supply voltage	5 V DC (via bus base module)
Current draw	max. 120 mA (up to HW 04) max. 60 mA (from HW 05)
Power consumption	max. 600 mW (up to HW 04) max. 300 mW (from HW 05)

Supply for digital output modules (U _O)	
Supply voltage	24 V DC
Supply voltage range	19.2 V DC 30 V DC (including all tolerances, including ripple)
Current draw	min. 35 mA (without actuators) max. 8 A (up to HW 04, provide external protection) max. 16 A (from HW 05, provide external protection; if the total current of 8 A is exceeded, connect the supply at the power connector parallel via both terminal points.)
Power consumption	typ. 800 mW (without actuators) max. 240 W (up to HW 04, of which 1.5 W constitute internal losses) max. 480 W (from HW 05, of which max. 2.4 W constitute internal losses)

8124_en_02 PHOENIX CONTACT 5 / 17

Supply for digital output modules (U _O)	
Surge protection of the supply voltage	electronic (35 V, 0.5 s)
Polarity reversal protection of the supply voltage	parallel diode; with external 5 A fuse (only for commissioning)
Protection	max. 8 A (up to HW 04, protection against polarity reversal up to 5 A) max. 16 A (form HW 05, protection against polarity reversal up to 5 A)



NOTE: Damage to the electronics

Provide external protection for the module to protect it against polarity reversal. If you are using an external fuse, the power supply unit must be able to supply four times the nominal current of the fuse. This ensures that it trips in the event of an error.



Up to hardware revision 04:

When using the module for the first time, protect it with a 5 A fuse. When all modules in the system are correctly connected, the 5 A fuse can be replaced with an 8 A fuse. After that, you can load the module up to 8 A. Loads over 8 A are not permitted.



As of hardware revision 05:

When using the module for the first time, protect it with a 5 A fuse. When all modules in the system are correctly connected, the 5 A fuse can be replaced with a 16 A fuse. After that, you can load the module up to 16 A. Loads over 16 A are not permitted.

Digital outputs	
Number of outputs	32
Connection method	Push-in connection
Connection technology	1-wire
Nominal output voltage	24 V DC
Maximum output current per channel	500 mA
Maximum output current per device	8 A (up to HW 04, provide external protection) 16 A (from HW 05, provide external protection)
Nominal load, ohmic	max. 12 W (48 Ω , with nominal voltage)
Nominal load, inductive	max. 12 VA (1.2 H, 48 Ω , with nominal voltage)
Nominal load, lamp	max. 12 W (at nominal voltage)
Signal delay	max. 150 µs (when switched on) max. 200 µs (during switching off with ohmic nominal load)
Switching frequency	max. 5500 per second (with ohmic load) max. 1 per second (with inductive load) max. 16 per second (with nominal lamp load)
Load min.	10 kΩ
Energy consumption	see diagram
Limitation of the voltage induced on circuit interruption	-32.8 V15 V
Output voltage when switched off	max. 1 V
Output current when switched off	max. 300 μA
Behavior with overload	Shutdown with automatic restart
Behavior with inductive overload	Output can be destroyed
Reverse voltage resistance to short pulses	limited protection up to 0.5 A for 1 s

8124_en_02 PHOENIX CONTACT 6/17

Digital outputs



NOTE: Damage to the electronics

If there is a faulty external voltage (reverse voltage) at one of the outputs, the output may be destroyed. This may cause unintentional setting of further outputs.

Overcurrent shut-down	as of 0.7 A
Output current with ground connection interrupt when switched off	< 1 mA

Short-circuit protection, overload protection of the outputs electronic

Input and output address area	
Input address area	0 Byte
Output address area	4 Byte

Configuration and parameter data in a PROFIBUS system				
Required parameter data	1 Byte			
Required configuration data	6 Byte			

Electrical isolation/isolation of the voltage areas					
Test section	Test voltage				
5 V communications power (logic), 24 V supply (I/O)	500 V AC, 50 Hz, 1 min.				
5 V supply (logic)/functional earth ground	500 V AC, 50 Hz, 1 min.				
24 V supply (I/O) / functional earth ground	500 V AC, 50 Hz, 1 min.				
Mechanical tests					

Mechanical tests	
Vibration resistance in acc. with EN 60068-2-6/ IEC 60068-2-6	5g
Shock in acc. with EN 60068-2-27/IEC 60068-2-27	30g
Continuous shock according to EN 60068-2-27/	10g

Conformance with EMC Directive 2014/30/EU

Noise immunity test in accordance with EN 61000-6-2

•	
Electrostatic discharge (ESD) EN 61000-4-2/ IEC 61000-4-2	Criterion B, 6 kV contact discharge, 8 kV air discharge
Electromagnetic fields EN 61000-4-3/IEC 61000-4-3	Criterion A, Field intensity: 10 V/m
Fast transients (burst) EN 61000-4-4/IEC 61000-4-4	Criterion B, 2 kV
Transient overvoltage (surge) EN 61000-4-5/ IEC 61000-4-5	Criterion B, DC supply lines: ±0.5 kV/±0.5 kV (symmetrical/asymmetrical)
Conducted interference EN 61000-4-6/IEC 61000-4-6	Criterion A; Test voltage 10 V
Noise emission test according to EN 61000-6-3	Class B

Approvals

For the latest approvals, please visit phoenixcontact.net/products.

8124_en_02 PHOENIX CONTACT 7/17

5 Maximum outputs power consumption when inductive loads are switched off



NOTE: Damage to the electronics

When you use an external freewheel limit, the free-wheeling voltage to a maximum of -15 V.

The value **must** be above -15 V, so -12 V, for example.

The external freewheel limit has no function with a higher negative voltage.

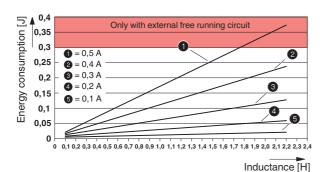


Figure 1 Maximum outputs power consumption when inductive loads are switched off

The specifications in the diagram refer to a maximum switching frequency of 1 Hz.

The diagram displays the maximum amount of energy that may be fed back into the the corresponding output groups (outputs 1 to 8, 9 to 16, 17 to 24, 25 to 32) for each switch off procedure during switching off of an inductive load without external freewheeling circuit.

The current data refers to the ohmic DC voltage component of the inductive load.

6 Internal circuit diagram

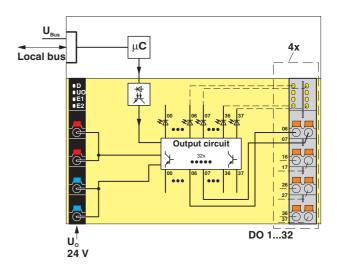


Figure 2 Internal wiring of the terminal points

Key:

Local bus Axioline F local bus

(hereinafter referred to as local bus)

Microcontroller

Optocoupler

tED .

Electrically isolated areas

Output configuration



7 Terminal point assignment




Figure 3 Terminal point assignment

Terminal point	Color	Assignment						
Supply voltage input								
a1, a2	Red	24 V DC (U _O)	Supply for digital output modules (internally jumpered)					
b1, b2	Blue	GND	Reference potential of the supply voltage (bridged internally)					
Digital out	puts							
00 07	Orange	OUT01 OUT08	Digital outputs 1 8					
10 17	Orange	OUT09 OUT16	Digital outputs 9 16					
20 27	Orange	OUT17 OUT24	Digital outputs 17 24					
30 37	Orange	OUT25 OUT32	Digital outputs 25 32					

8 Connection example

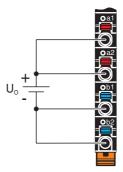


Figure 4 Parallel supply of the supply voltage

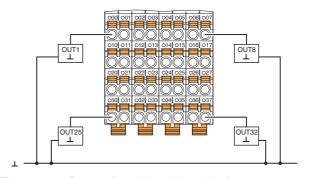


Figure 5 Connection with 1-wire technology

Make sure that the GND of the actuators and the GND for $\rm U_{\rm O}$ have the same potential!

8124_en_02 PHOENIX CONTACT 9/17

9 Local diagnostic and status indicators

As of hardware revision 05





Channel errors are errors that can be associated with a channel.

Periphery errors are errors that affect the entire module.

Figure 6 Local diagnostic and status indicators

Designa- tion	Color	Meaning	State	Description				
D	Red/	Diagnostics of lo	ocal bus communication					
	green Active (Green on	The device is ready for operation, communication within the station is OK. All data is valid. An error has not occurred.				
			Green flashing	The device is ready for operation, communication within the station is OK. The data is not valid. No valid data provided by the controller/higher-level network. There is no error on the module.				
		Device applica- tion not active	Flashing green/yellow	The device is ready for operation, communication within the station is OK. Output data cannot be outputted and/or input data cannot be read. There is a fault on the periphery side of the module				
	Ready		Yellow on	The device is ready for operation but did not detect a valid cycle after power-up.				
		Connected	Yellow flash- ing	The device is not (yet) part of the active configuration.				
		Reset	Red on	The device is ready for operation but has lost the connection to the bus head.				
		Not connected	Flashing red	The device is ready for operation but there is no connection to the previously existing device.				
		Power down	OFF	Device is in (power) reset.				
U _O	Green	U _{Output}	On	Supply for digital output modules present.				
			OFF	Supply for digital output modules is not present.				
E1	Red	Peripheral fault	On	I/O error present.				
			OFF	No I/O error.				
E2	Red	ed Channel error On		Channel error present.				
			OFF	Channel error not present.				
00 37	Red/	Diagnostics / Red on		Short-circuit/overload of the output.				
	yellow	Status of the	Yellow on	Output is set.				
	outputs		OFF	No error, output is not set.				

8124_en_02 PHOENIX CONTACT 10 / 17

Deviating behavior up to hardware revision 04

The LED E2 is not present.

Designa- tion	Color	Meaning	State	Description
E1	Red	Peripheral fault	On	Breakdown or overload/short-circuit of an output.
			OFF	No I/O error.

10 Process data

I/O data is mapped in the Motorola format.

OUT process data

Byte		0						
Bit	7	6	5	4	3	2	1	0
Signal	OUT 08	OUT 07	OUT 06	OUT 05	OUT 04	OUT 03	OUT 02	OUT 01
Terminal point	07	06	05	04	03	02	01	00

Byte					1			
Bit	7	6	5	4	3	2	1	0
Signal	OUT 16	OUT 15	OUT 14	OUT 13	OUT 12	OUT 11	OUT 10	OUT 09
Terminal point	17	16	15	14	13	12	11	10

Byte				2	2			
Bit	7	6	5	4	3	2	1	0
Signal				OUT				OUT
	24	23	22	21	20	19	18	17
Terminal point	27	26	25	24	23	22	21	20

Byte		3						
Bit	7	6	5	4	3	2	1	0
Signal	OUT							
	32	31	30	29	28	27	26	25
Terminal point	37	36	35	34	33	32	31	30

11 Parameter, diagnostics and information (PDI)

Parameter and diagnostic data as well as other information is transmitted as objects via the PDI channel of the Axioline F station.

The standard and application objects stored in the module are described in the following section.

The following applies to all tables below:

Please refer to the UM EN AXL F SYS INST for an explanation of the data types.

Abbreviation	Meaning
Α	Number of elements
L	Length of the elements in bytes
R	Read
W	Write



Each visible string is terminated with a null terminator $(00_{\rm hex})$. The length of a visible-string-type element is therefore at least one byte larger than the number of user data items.

If the number of user data items plus null terminator is smaller than the specified length of the element, the visible string will be populated with a null character $(00_{\rm hex})$.



For detailed information on PDI objects, please refer to the UM EN AXL F SYS INST user manual.

8124_en_02 PHOENIX CONTACT 11 / 17

12 Standard objects

12.1 Objects for identification (device rating plate)

As of hardware revision 05

Index (hex)	Object name	Data type	Α	L	Rights	Meaning	Contents
Manufa	acturer						
0001	VendorName	Visible String	1	32	R	Vendor name	Phoenix Contact
0002	VendorID	Visible String	1	7	R	Vendor ID	00A045
0003	VendorText	Visible String	1	58	R	Vendor text	Components and systems
							for industrial automation
0012	VendorURL	Visible String	1	58	R	Vendor URL	www.phoenixcontact.com
Module	e - general						
0004	DeviceFamily	Visible String	1	16	R	Device family	I/O digital OUT
0006	ProductFamily	Visible String	1	32	R	Product family	AXL F
000E	CommProfile	Visible String	1	4	R	Communication profile	633
000F	DeviceProfile	Visible String	1	5	R	Device profile	0010
0011	ProfileVersion	Record of Visi- ble Strings	2	11; 21	R	Profile version	2011-12-07; Basic - Profile V2.0
0017	Language	Record of Visi- ble Strings	2	6; 8	R	Language	en-us; English
003A	VersionCount	Array of UINT16	4	4 * 2	R	Version counter	e.g., 0007 0001 0001 0001 _{hex}
Module	e - special	1				-	
0005	Capabilities	Visible String	1	8	R	Capabilities	Nothing
0007	ProductName	Visible String	1	32	R	Product name	AXL F DO32/1 1F
8000	SerialNo	Visible String	1	22	R	Serial number	e. g., 1234512345
0009	ProductText	Visible String	1	58	R	Product text	32 digital outputs
000A	OrderNumber	Visible String	1	32	R	Order No.	2688051
000B	HardwareVersion	Record of Visi- ble Strings	2	11; 11	R	Hardware version	e. g., 2011-02-04; 00
000C	FirmwareVersion	Record of Visi- ble Strings	2	11; 11	R	Firmware version	e.g., 2017-12-31; 1.00
000D	PChVersion	Record of Visi- ble Strings	2	11; 6	R	PDI version	e. g., 2010-06-21; V1.00
0037	DeviceType	Octet string	1	8	R	Device type	00 40 00 04 00 00 00 D3 _{hex}
Use of	the device	•		•	•	•	
0014	Location	Visible String	1	59	R/W	Location	Can be completed by the user.
0015	EquipmentIdent	Visible String	1	59	R/W	Equipment identi- fier	Can be completed by the user.
0016	ApplDeviceAddr	UINT16	1	2	R/W	Application device address	Can be completed by the user.

8124_en_02 PHOENIX CONTACT 12 / 17

Deviating behavior up to hardware revision 04

Index (hex)	Object name	Data type	Α	L	Rights	Meaning	Contents
Manufa	acturer						
0001	VendorName	Visible String	1	16	R	Vendor name	Phoenix Contact
0003	VendorText	Visible String	1	49	R	Vendor text	Components and systems for industrial automation
0012	VendorURL	Visible String	1	23	R	Vendor URL	www.phoenixcontact.com
Module	e - general						
0006	ProductFamily	Visible String	1	6	R	Product family	AXL F
0011	ProfileVersion	Record of Visi- ble Strings	2	11; 20	R	Profile version	2011-12-07; Basis - Profil V2.0
003A	VersionCount	UINT16	4	4 * 2	R	Version counter	e.g., 0007 0001 0000 0000 _{hex}
Module	e - special						
0007	ProductName	Visible String	1	16	R	Product name	AXL F DO32/1 1F
8000	SerialNo	Visible String	1	11	R	Serial number	e. g., 1234512345
0009	ProductText	Visible String	1	19	R	Product text	32 digital outputs
000A	OrderNumber	Visible String	1	8	R	Order No.	2688051
000B	HardwareVersion	Record of Visi- ble Strings	2	11; 3	R	Hardware version	e. g., 2011-02-04; 00
000C	FirmwareVersion	Record of Visi- ble Strings	2	11; 3	R	Firmware version	0000-00-00;

12.2 Miscellaneous standard objects

Index (hex)	Object name	Data type	Α	L	Rights	Meaning/contents	
Diagno	stics objects						
0018	DiagState	Record	6	58	R	Diagnostic state	*
Objects	s for process data r	management					
0026	PDOUT	Octet string	1	4	R	Output process data	*
003B	PDIN_Descr	Array of Records	3	8; 2; 2	R	Description of the IN process data	
003C	PDOUT_Descr	Array of Records	3	8; 2; 2	R	Description of the output process data	

The objects marked in the last column with an * are described in more detail in the next sections.

The description of the other objects is to be found in the user manual UM EN AXL F SYS INST.

The objects $003B_{\mbox{\scriptsize hex}}$ and $003C_{\mbox{\scriptsize hex}}$ are only applicable to tools.

8124_en_02 PHOENIX CONTACT 13 / 17

12.3 Diagnostics objects

Diagnostics state (0018_{hex}: DiagState)

This object is used for a structured message of an error.

As of hardware revision 05

0018 _{hex} : Dia	gnostics state (read)			
Subindex	Data type	Length in bytes	Meaning	Contents	S
0	Record	58	Diagnostic state	Complete	e diagnostics information
1	UINT16	2	Error number	0 6553	5 _{dec}
2	UINT8	1	Priority	00 _{hex}	No error
				01 _{hex}	Error
				02 _{hex}	Warning
				81 _{hex}	Error removed
				82 _{hex}	Warning eliminated
3	UINT8	1	Channel/group/module	00 _{hex}	No error
				01 _{hex}	Channel 1 (OUT1)
				20 _{hex}	Channel 32 (OUT32)
				FF _{hex}	entire device
4	UINT16	2	Error code	See table	below
5	UINT8	1	More follows	00 _{hex}	
6	Visible String	51	Text	See table below	



The message with priority 81_{hex} or 82_{hex} is a one-off, internal message to the bus coupler. The bus coupler transfers this error message to the error mechanisms of the higher-level system.



After all errors have been eliminated, it is automatically reset.

Error and status of the local diagnostics and status indicators

Subindex	2	3	4	6					
Error	Pri- ority	Channel/ group/ module	Error code	Text	LED				
	hex	hex	hex		D	Uo	E1	E2	XX
No error	00	00	0000	Status OK	green on	on	off	off	off
Short-circuit/overload of an output	02	##	2344	Overload/short circuit DO##, terminal point \$\$	green on	on	off	red on	red on
Actuator supply not present	01	FF	3422	Missing I/O supply UO, terminal point a1/a2, b1/b2	flashing green/yellow	off	red on	off	off

Channel number xx LED Diagnostics of the output \$\$ Terminal point number xx 00 ... 07, 10 ... 17, 20 ... 27, 30 ... 37



"Actuator supply not present" is then signaled using object 0018_{hex} and LED E1 if you have configured a setting stipulating that the error should be sent to the controller (see object FF8F_{hex}).

8124_en_02 PHOENIX CONTACT 14 / 17

Deviating behavior up to hardware revision 04

0018 _{hex} : Dia	0018 _{hex} : Diagnostics state (read)									
Subindex	Data type	Length in bytes	Meaning	Contents						
0	Record	8	Diagnostic state	Complet	e diagnostics information					
1	UINT16	2	Error number	0 6553	35 _{dec}					
2	UINT8	1	Priority	00 _{hex}	No error					
				01 _{hex}	Error					
				02 _{hex}	Warning					
				81 _{hex}	Error removed					
				82 _{hex}	Warning eliminated					
3	UINT8	1	Channel/group/module	00 _{hex}	No error					
				FF _{hex}	entire device					
4	UINT16	2	Error code	See table below						
5	UINT8	1	More follows	00 _{hex}						
6	Visible String	1	Text	00 _{hex}						

Error and status of the local diagnostics and status indicators

Subindex	2	3	4				
Error	Priority	Channel/ group/ module	Error code	LED			
	hex	hex	hex	D	Uo	E1	xx
No error	00	00	0000	green on	on	off	off
Short-circuit/overload of an output	02	00	2344	green on	on	red on	red on
Actuator supply not present	01	FF	3422	green on or flash- ing green/yellow	off	off	off

xx LED Diagnostics of the output xx 00 ... 07, 10 ... 17, 20 ... 27, 30 ... 37

The behavior of LED D during an "Actuator supply not present" error depends on whether you have switched error reporting via the $FF8F_{hex}$ object on or off.

Parameterization in FF8F _{hex}	D LED
Do not report error to the controller	green
Report error to the controller	flashing green/yellow

8124_en_02 PHOENIX CONTACT 15 / 17

12.4 Objects for process data management

OUT process data (0026_{hex}: PDOUT)

You can read the OUT process data of the module with this object.

The structure corresponds to the representation in the "Process data" section.

0026 _{hex} : OUT pr	0026 _{hex} : OUT process data (read)							
Subindex Data type Length in bytes Meaning								
0	Octet string	4	Output process data					

13 Application objects

In the case of valid parameters, the parameterization is stored in the module permanently.

Index (hex)	Object name	Data type	Α	L	Rights	Meaning/contents
FF8D	PD Output Substitute Configuration	UINT8	1	1	R/W	Substitute value behavior
FF8F	DiagOut	UINT8	1	1	R/W	Message "Actuator supply not present"

13.1 Substitute value behavior (FF8D_{hex}: PD Output Substitute Configuration)

With this object, you parameterize the behavior of the module so that an application reset can be detected if necessary.

FF8D _{hex} : Substitute value behavior (read, write)								
Subindex	Data type	Length in bytes	S Contents					
0	Var	1	00 _{hex} (Default)	Set outputs to 0				
			01 _{hex}	Hold last value				

13.2 Message "Actuator supply not present" (FF8F_{hex}: DiagOut)

With this object, you parameterize whether the "Actuator supply missing" error is reported to the controller or not.

FF8F _{hex} : Message "Actuator supply not present" (Read, write)							
Subindex Data type Length in bytes Contents							
0	Var	1	00 _{hex} (Default)	Do not report error to the controller			
			01 _{hex}	Report error to the controller			

As of hardware revision 05

If you parameterize the module so that the error is not reported to the controller, the corresponding indicator in LED E1 (red on) is suppressed. The behavior of the LED D is not affected.

Deviating behavior up to hardware revision 04

If you parameterize the module so that the error is not reported to the controller, the corresponding indicator in LED D (flashing green/yellow) is suppressed and the LED lights up green.

8124_en_02 PHOENIX CONTACT 16 / 17

14 Device descriptions

The device is described in the device description files. The device descriptions for controllers from Phoenix Contact are included in PC Worx and the corresponding service packs.

The device description files for other systems are available for download at phoenixcontact.net/products in the download area of the bus coupler used.