

Panorama

Softstarters The complete range

Why does soft starting matter?

Controlling industrial electricity. The vast majority of the world's industrial applications are driven by motors. It is estimated that 28 percent of all electricity used in one year is dedicated to run industrial motors. Controlling this important resource is what ABB's softstarters does in an excellent way.

Secure motor

Reliability

With ABB's softstarters current peaks are eliminated and the starting current is reduced significantly. The load and voltage protections keep your motor protected from load and network irregularities. More features that will improve the overall reliability of the motor are three types of current limit and earth fault protection, amongst others.



Improve installation

Efficiency

The built-in bypass will reduce both energy consumption and heat generation while running motors at full speed. It saves both time on installation, space inside the panels, and it reduces the cost of extra cooling equipment. ABB's softstarters also come with HMI's that are easy to learn, improving the efficiency of the softstarters once they are in use.



Increase application

Productivity

ABB's softstarters will reduce mechanical wear and tear and increase the productivity of your applications. With torque control damage to pump systems from problems like water hammering can be completely avoided. The continuous operation of applications can also be increased by features like jog with slow speed, pump cleaning and limp mode, which allows your application to do more.





Yantai Guhe Electric Improving water supply reliability

Manufacturing over 1,000 installation panels for pump systems annually requires the use of reliable motor starting solutions. In the past Yantai Guhe Electric experienced problems with water hammering when stopping pumps with the panels it built. However, since using ABB's softstarters with torque control this problem has been eliminated. This lead to a 20 percent reduction of downtime and a 40 percent reduction of cost. Benefits as a result of using ABB's softstarters.

Why soft starting matters to Yantai Guhe Electric



For more examples of ABB's softstarters helping the industry, visit: new.abb.com/low-voltage/launches/pstx

PSR — The compact range









TF96

TF140DU

Normal start In-Line connected (400 V) kW IEC, Max. A (440-480 V) hp UL, Max. A

	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
/	1.5	3	4	5.5	7.5	11	15	18.5	22	30	37	45	55
4	3.9	6.8	9	12	16	25	30	37	45	60	72	85	105
)	2	3	5	7.5	10	15	20	25	30	40	50	60	75
4	3.4	6.1	9	11	15.2	24.2	28	34	46.2	59.4	68	80	104

400 V, 40 °C

Using manual motor starter or MCCB, type 1 coordination will be achieved. 1)

Manual motor starters (50 kA	١)
------------------------------	----

MS116	MS132	MS450	MS495	-

Using gG fuses, type 1 coordination will be achieved. To achieve type 2 coordination, semiconductor fuses must be used. ¹⁾

Fuse protection (50 kA) gG Fuse													
10 A	16 A	25 A	32 A	50 A	63 A	100 A	125 A	200 A	250 A				

Suitable switch fuse for the recommended semiconductor – fuses. 1)

Switch fuse

06336	061050	OC250

The line contactor is not required for the softstarter itself but often used to open if OL trips. ¹⁾

_ine	conta	ctor

Thermal overload relay

AF9	AF12	AF16	AF26	AF30	AF38	AF52	AF65	AF80	AF96	AF116
-----	------	------	------	------	------	------	------	------	------	-------

Overload protection is always required to protect the motor: 1)


the motor: 1)	TF42
1) This is an example of	a coordination. For more examples see: applications.it.abb.com/SOC

Select softstarter	according to load							
Normal start class 10	Heavy duty start class 30							
Bow thruster	Centrifugal fan							
Centrifugal pump	Crusher							
Compressor	Conveyor belt (long)							
Conveyor belt (short)	• Mill							
Elevator	Mixer							
	Stirrer							
Select size according to the motor kW ratings.	Select a softstarter one size larger compared to the motor kW ratings.							

In-line or inside delta for PSTX

The PSTX softstarter can be connected inside the motor delta. In this case the current through the softstarter is reduced by 42 %. It will then be possible, for example, to run a 100 A motor using a 58 A softstarter.

TF65

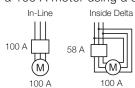

PSE — The efficient range







		,		,	,								,	
PSE18	PSE25	PSE30	PSE37	PSE45	PSE60	PSE72	PSE85	PSE105	PSE142	PSE170	PSE210	PSE250	PSE300	PSE370
7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	200
18	25	30	37	45	60	72	85	106	143	171	210	250	300	370
10	15	20	25	30	40	50	60	75	100	125	150	200	250	300
18	25	28	34	42	60	68	80	104	130	169	192	248	302	361

400 V, 40 °C

MCCB (50 kA)					
	XT2S160	XT4S250	T4S320	T5S400	T5S630


Fuse protect	Fuse protection (85 kA), Semiconductor fuses, Bussmann														
170M1563	170M1564	170M1566	170M1567	170M1568	170M1569	170M1571	170M1572	170M3819	170M5809	170M5810	170M5812	170M5813	170M6812	170M6813	
													İ		

SWILCH TUSE													
OS32G	OS32G OS63G		OS63G		OS1	25G	OS250	OS400			OS630		
Line Contactor													
AF26	AF30	AF38	AF52	AF65	AF80	AF96	AF116	AF140	AF190	AF205	AF265	AF305	AF400

1							

Electronic overload relay

Built-in

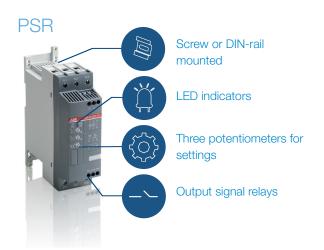



PSTX — The advanced range







PSTX30	PSTX37	PSTX45	PSTX60	PSTX72	PSTX85	PSTX105	PSTX142	PSTX170	PSTX210	PSTX250	PSTX300	PSTX370
15	18.5	22	30	37	45	55	75	90	110	132	160	200
30	37	45	60	72	85	106	143	171	210	250	300	370
20	25	30	40	50	60	75	100	125	150	200	250	300
28	34	42	60	68	80	104	130	169	192	248	302	361

400 V, 40 °C

MCCB (50 KA)				
XT2S160	XT4S250	T4S320	T5S400	T5S630

<i></i>												
Fuse protection	on (80 kA), Ser	emiconductor fu	uses, Bussmar	ภท								
170M1567	170M1568	170M	11569	170M1571	170M1572	170M3819	170M5810	170M5	5812	170M5813	170M6812	170N
Switch fuse												
OS32G		OS63G		OS1	125G	OS250		OS40	:00			OS
i												
Line contacto	or											
AF30	AF38	AF52	AF65	AF80	AF96	AF116	AF140	AF190	AF205	AF265	AF305	AF370

Electronic overload relay

Built-in


PSTX

Three programmable digital inputs and start and stop

Three programmble output signal relays

Clear markings on the front for easy installation and handling

Extension I/O for extra inputs and outputs

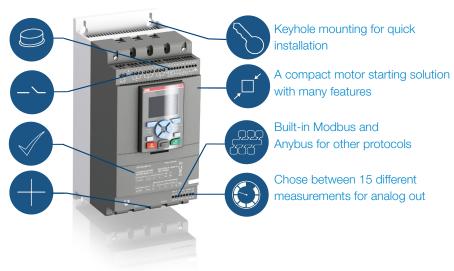







Ļ						
	PSTX470	PSTX570	PSTX720	PSTX840	PSTX1050	PSTX1250
Ī	250	315	400	450	560	710
ĺ	470	570	720	840	1050	1250
ĺ	400	500	600	700	900	1000
ĺ	480	590	720	840	1062	1250

T7S800	T7S1250	E2.2N 2000

И6813	170M6814	170M8554	170M6018	170M6020	170M6021

630	OS800	-	

AF460	AF580	AF750	AF1350	AF1650	-

Rι	nili	t_i	n	


Sc	oftsta	arter	featu	re selection guide
	PSR	PSE	PSTX	Standard O Opional - Not available
		•	•	Current limit
	-	-	•	Current limit ramp and dual current limit
_	-	•	•	Electronic motor overload protection
ŧ.	-	-	•	Dual overload protection
liab	-	•	•	Underload protection
re	-	-	•	Power factor underload protection
oto	-	•	•	Locked rotor protection
Secure motor reliability	-	-	•	Current/Voltage imbalance protection
ür	-	-	•	Phase reversal protection
Sec	_	-	•	Customer defined protection
	_	_	•	Motor heating
	_	_	•	PTC/PT100 input for motor protection
	_	_	•	Overvoltage/undervoltage protection
	_	-	•	Earth-fault protection
	•	•	•	Built-in bypass
	_	_	•	Inside-delta connection possible
>	_	•	•	Graphical display and keypad
nc.	_	_	•	Detachable keypad
mprove installation efficiency	_	_	•	Motor runtime and start count
eff	_	_	•	Programmable warning functions
ţį	_	_	•	Diagnostics
alla	_	_	•	Overload time-to-trip
nst		_	•	Overload time-to-cool
e.		•	•	Analog output
ō	0	0	•	Fieldbus communication
Ĕ		0	•	Event log
		_	17	Multiple languages
	<u>-</u>		•	Electricity metering
		•	•	Torque control
Vit.				Torque limit
Ę		•	•	Coated PCBA
ъ Д	l			Limp mode
p.			•	Jog with slow speed forward/ reverse
ţio				,
Increase application productivity				Dynamic brake
ddı			-	Stand still brake
9e		_	•	Sequence start
eas	_	-	•	Full voltage start
ncr		•	•	Kick start
_	-	-	•	Manual pump cleaning

Customizable display for important status information

Backlit display makes status information easy to read

Application assistant for fast and easy set-up

IP66 (1, 4x outdoor, 12) protection against water and dust

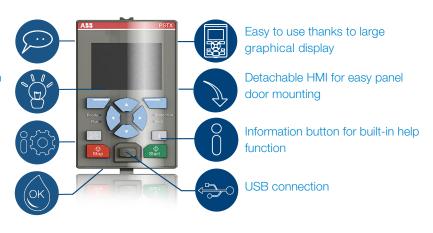

Contact us

ABB AB Low Voltage Products SE-721 61 Västerås / Sweden

new.abb.com/low-voltage/launches/pstx



Note

We reserve the right to make technical changes or modify the contents of this document without prior notice.

ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright© 2015 ABB - All rights reserved